



**Centrepiece**  
Decorative Plasterwork  
Manufacture, Restoration & Fitting  
Stockists of Farrow and Ball Paints  
Multi Fuel Stoves  
amtico Flooring  
centrepieces@gmail.com

15 - 17 Suffolk Road  
Cheltenham  
Glos. GL50 2AF  
Tel: (01242) 226220  
Fax: (01242) 226232


CORNICE ♦ CEILING CENTRES ♦ CORBELS ♦ NICHES ♦ DADO RAILS ♦ FIREPLACES ♦ DOOR FURNITURE ♦ SWITCHES ♦ BATHROOM ACCESSORIES

### FITTING A CEILING CENTRE

1. Drill and countersink two holes (more than 2 for ceiling centres 2ft and above) Drill centre for cables.



2. Hold ceiling centre in position. Mark position of ceiling centre and holes on the ceiling.

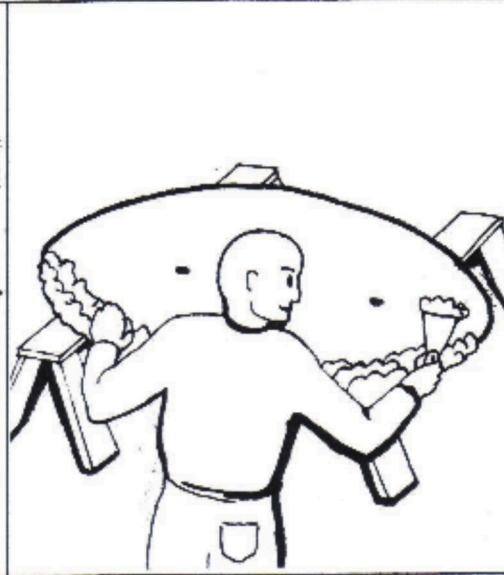

3. Drill ceiling and put in plasterboard plugs for screws (or screw into joints if located). Seal the back of the ceiling centre with a PVA solution and apply adhesive.

4. Push ceiling centre into position. Put in screws. Scrape off excess adhesive, then brush edge smooth with water. Fill screw holes and edges.