



# Centrepiece

Decorative Plasterwork  
Manufacture, Restoration & Fitting  
Stockists of Farrow and Ball Paints  
Multi Fuel Stoves  
amtico Flooring  
centrepieces@gmail.com


15 - 17 Suffolk Road  
Cheltenham  
Glos. GL50 2AF

Tel: (01242) 226220


Fax: (01242) 226232

CORNICE ♦ CEILING CENTRES ♦ CORBELS ♦ NICHES ♦ DADO RAILS ♦ FIREPLACES ♦ DOOR FURNITURE ♦ SWITCHES ♦ BATHROOM ACCESSORIES


## FITTING A CORNICE

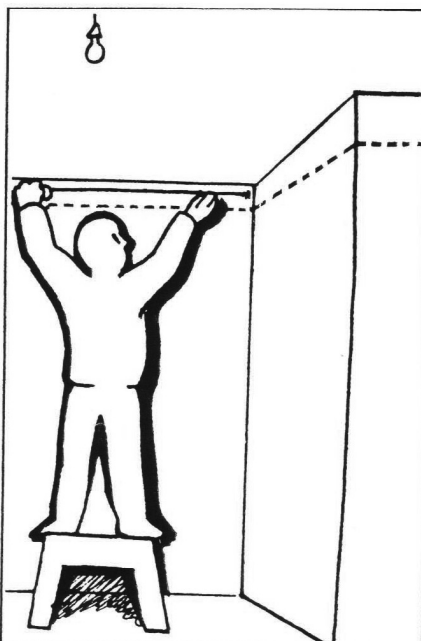


1. Start fitting at the least noticeable corner in the room and work your way round the room. Draw a guideline on the wall to mark where the bottom edge of the cornice will sit. (The distance between the ceiling and the guideline is given in millimetres on the mitreblock).

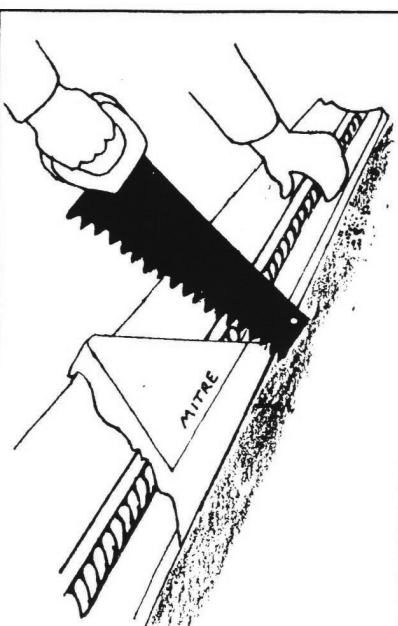


2. Place the mitre block on top of the cornice pattern. Place sawblade against the mitreblock and cut required length of cornice.

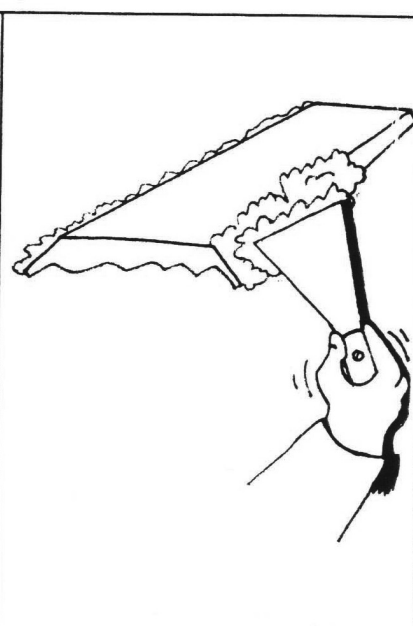


3. Seal the two back edges of the cornice with a PVA solution and then butter with adhesive.

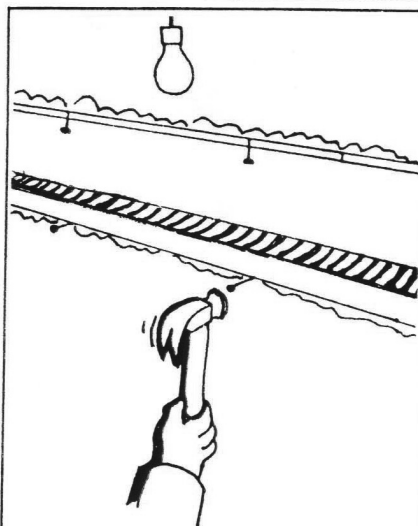

4. Push the cornice into position. Put nails into wall and ceiling against outer edges of cornice at 3-4 ft intervals. Scrape off excess adhesive, then brush edges clean with water. When all the cornice is in place LEAVE FOR 24 HOURS.

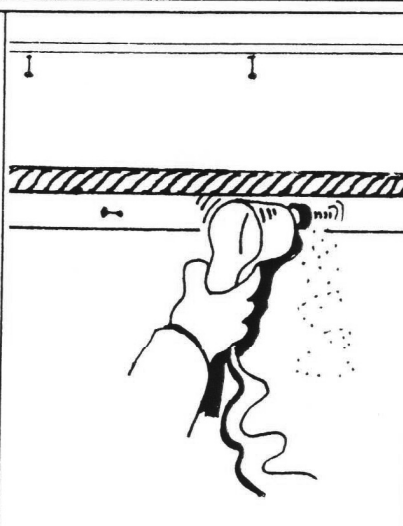

5. Drill holes in top and bottom of the cornice at 3-4ft intervals and countersink. Hammer in 1"-2" nails into holes.

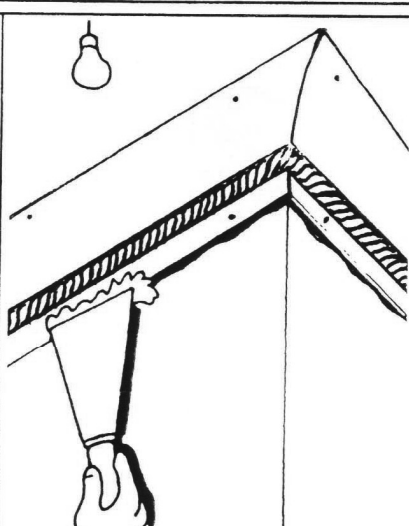

6. Remove external nails. Fill joints, nail heads and top and bottom edges of cornice with Tetrion filler (not ready mixed). Overfill joints and nail heads. Start in one corner and work your way round. After an hour stop filling. Go back to your first corner and carve the filler into shape whilst still soft. Brush smooth with water. Repeat on all joints and nailheads.